

AQUA LVL - Operating & Maintenance Instructions

Mounting Unit to Wall

Position bracket on wall in position required so that 'OKW' and tab is towards the top of the bracket and secure using 2 screws. Position unit on bracket so that tabs on bracket engage in corresponding holes in back of unit. Push unit firmly downwards to lock in place.

To release, push tab, push unit upwards and pull unit away from bracket.

Mounting Probe

Drill hole in side/lid of tank (depending whether sensor assembly is 'side mount' or 'top mount') in position required and insert probe from inside of tank and secure in position by tightening backnuts so that the tip of the probe is an appropriate distance above the normal maximum water line.

Connect probe to 'Sensor Output' socket on unit using cable supplied

Mains Connection

Connect unit to a 6A fused spur to a 230V/50HZ ac supply using plug supplied from 'Supply In 240V ac' socket using the following pin assignments:

Pin 1	-	Live
Pin 2	-	Neutral

Alarm Connection

Connect strobe light to 'Alarm' socket using plug supplied using the following pin assignments:

Pin 1	-	Live
Pin 2	-	Neutral

Periodic Maintenance

There is no reason to do any periodic maintenance on this unit.